

Installation Instructions

Model Number 1039-00

Assembly Components:

- Ceiling "speaker grill" antenna mount Model 1039-00 assembly – 1 each
- Ceiling tile bridge – 1 each (pre-assembled to enclosure)
- #6-32 nut – 4 each (optional)
- Speaker grill screw (painted head) – 4 each

If any of these items are missing, contact your Oberon representative.

Find a flat work surface to assemble the *ceiling tile bridge*, *access point* and *antenna(s)* prior to mounting in ceiling.

Step 1 – Place the *ceiling antenna mount assembly* on the work surface.

Step 2 - Cut a 12" diameter hole in the center of a ceiling tile (not included).

Step 3 - Lay ceiling tile over the tile bridge such that the tile bridge spans the full width of the ceiling tile.


Step 4 – If applicable, install the antenna(s) per instructions included with the optional antenna kit. After installation, connect the *RF coax cable* from the *antenna* to the *access point*.

Step 5 - Lay *speaker grill* over cutout on ceiling tile to align the mounting holes.

Step 6 - Secure *speaker grill* to assembly using the speaker grill screws with white painted heads. Use optional nuts to secure the speaker grill if necessary.

The assembled unit is now ready for ceiling installation.

Step 7 – Remove the ceiling tile from the location where the access point enclosure is to be placed (if necessary) and replace with the assembled unit.

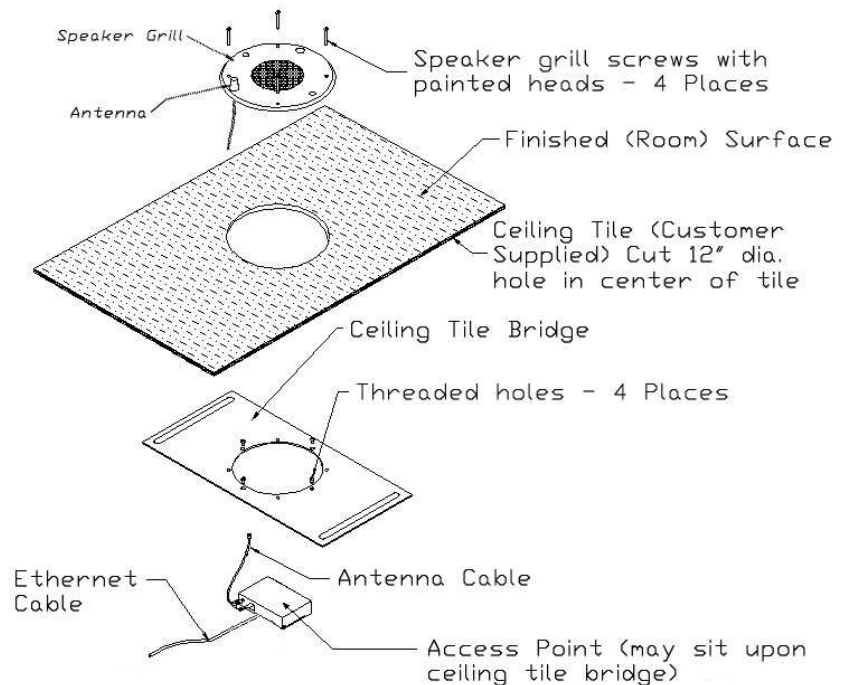


⚠️IMPORTANT**** - This is an important safety feature that could prevent human injury or damage to the access point should the unit become dislodged from the ceiling.

Installation Instructions

Model Number 1039-00

*View showing
access point
and ceiling
tile bridge
resting on
top of ceiling
tile.*

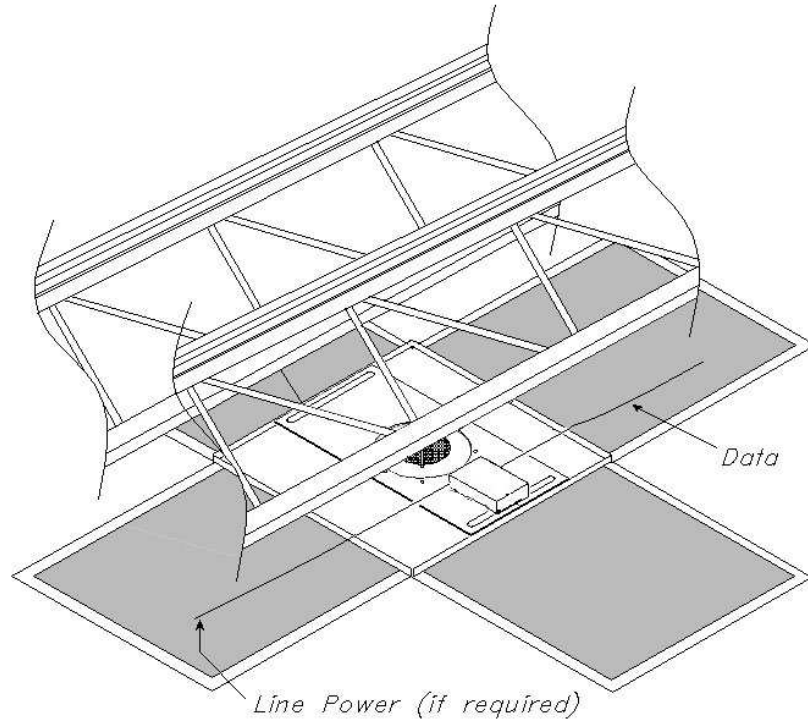

Step 8 - Run the data and power cable (if required) to the *access point* positioned on the tile bridge.