


Installation Instructions

AHAP330 Skin

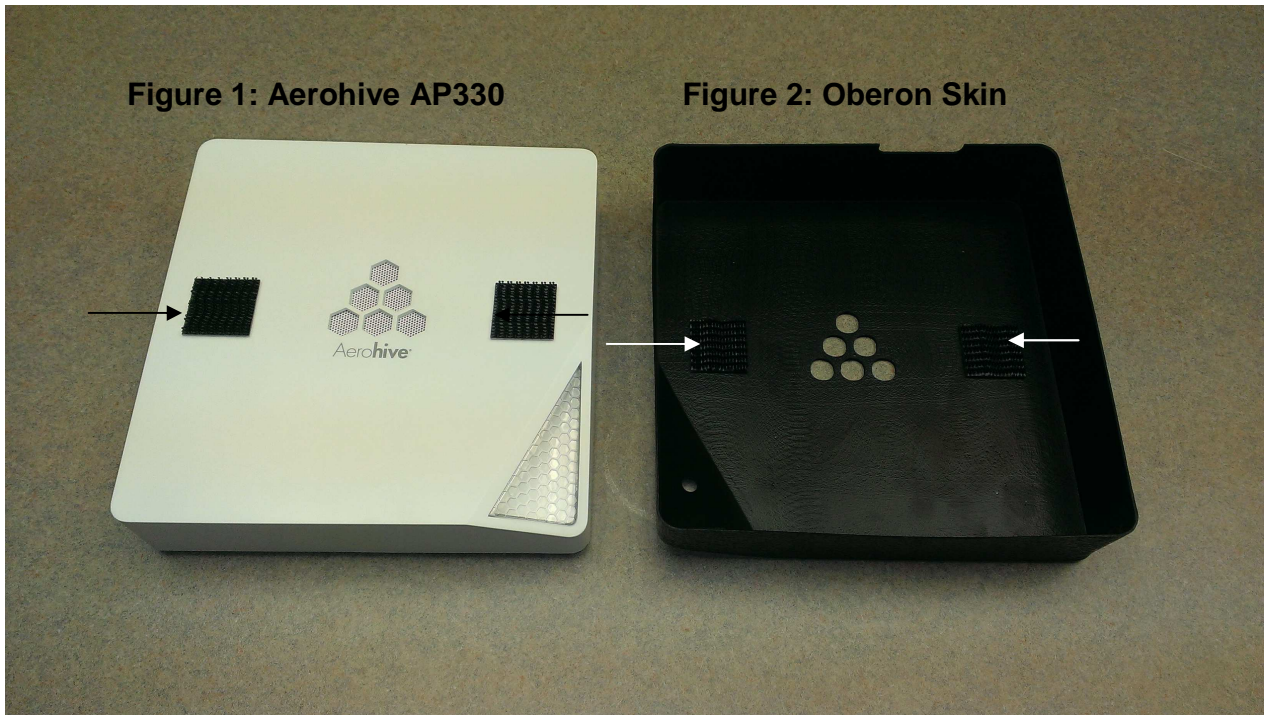

The following procedure should be used to install the Oberon skin on the Aerohive Networks AP330 access point.

- 1) Be sure that the surfaces of the Aerohive AP and the skin are clean. Prepare both surfaces by wiping with an alcohol swab to remove dirt and oil.
- 2) Remove the protective covering to expose the adhesive on the Velcro strips and place one piece on each side the plastic dome of the Aerohive Access Point near the metal center section as shown in Figure 1.
- 3) Repeat the procedure for the dome, placing the Velcro strips just outside of the raised emboss inside the skin as shown in Figure 2.
- 4) Place the skin onto the Aerohive AP and press firmly to lock the Velcro strips together. Note that the Velcro strips have significant holding power and removing the cover will be very difficult.